

Quick Setting Manual

1. Open the package and check the appearance and accessories.

2. Getting Started Guide

Connect the barcode scanner to the host through wired. If the connect the method is correct, the scanner will has sound "beep beep". Applicable to WAI-5780.

3. Connection And Transmission Scheme

3.1 USB

Scanner connected with device/PC, scan "USB Keyboard" setting code, it can configure the device to USB keyboard mode. In the environment where the application software requires serial port, scan "USB COM" and identify it as USB COM type, which requires the user to install the driver (the default configuration of this barcode is 115200 baud rate, 8 data bits, no check bit, 1 stop bit).



USB Keyboard



USB COM

3.2 RS232

To connect the RS232 interface, need to scan the "RS232" setting code, add carriage return and line feed by default, and the relevant configuration of the serial port is: 115200 baud rate, 8-bit data, no check bit, 1-bit stop bit.



RS232

3.3 USB HID



USB HID

4. Restore Factory Default

4.1 After scan "Restore Factory Default", scanner interface will be USB Keyboard .



Restore Factory Default

4.2 Version Reading



Version Reading

5. Decoding Configuration

5.1 CR and LF



Add CR



Cancel CR



Add CR and LF



Cancel CR and LF

5.2 Automatic Detection Mode

In the automatic detection scanning mode, turn on the low illumination to detect whether there is a bar code. When bar code is detected, scanner will turn on illumination lighting to read the bar code.



Automatic detection mode

5.3 Continues Reading Mode

The scanning device will always be in working condition.



Continue reading mode

5.4 LED Illumination



Turn On Illumination



Turn Off Illumination

5.5 Aimer



Turn On Aimer



Turn Off Aimer

5.6 Decoding successful prompt

tone volume



Low



Medium



High



Turn off

5.7 Time Interval

The reading delay of different barcodes when reading



No time interval



 
500ms

6. Function configuration

6.1 Barcode reversal



Not Support



Only support inverted code



All support

Scanner has been set to **Only support inverted code**, support normal code at the same time,scan the inverted code to support both.



All support

6.2 Safe Mode



Turn Off configuration code function



Turn on configuration code function

6.3 QR code URL barcode configuration



Turn Off URL



Turn On URL

6.4 Alipay Invoicing Function

Alipay invoicing is divided into two setting methods: GBK and UNICODE according to the output format.

6.4.1 GBK format invoicing



Turn on step 1



Turn on step 2



Turn on step 3



Turn off

6.4.2 UNICODE:



Turn on step 1



Turn on step 2



Turn on step 3



Turn Off

6.5 Code ID Prefix



Add number as prefix

7. Supplementary Barcode

When the content of the barcode contains English characters, need to scan the barcode below to set it.



English character switch